

SÄMANN

make a difference.



Assembly instructions

SÄMANN FOLDABLE PLAYPEN 100X100 CM

EDITION 12/2022

IMPORTANT! KEEP FOR FUTURE REFERENCE!

- DO NOT LEAVE ANY OBJECTS IN THE PLAYPEN THAT THE CHILD COULD USE TO CLIMB UP OR THAT POSE A RISK OF SUFFOCATION (PLASTIC BAGS) OR STRANGULATION.
- ALL SCREWED CONNECTIONS ON THE PLAYPEN MUST ALWAYS BE PROPERLY TIGHTENED. CONSTANTLY CHECK ALL PARTS, OTHERWISE INJURIES (E.G. PINCHING OF FINGERS) MAY OCCUR.
- THE PLAYPEN MUST BE KEPT AWAY FROM OPEN FIRE SOURCES OR SOURCES OF INTENSE HEAT (RADIANT HEATERS, OVENS, FIREPLACES).
- NO OBJECTS MAY BE PLACED OVER THE PLAYPEN UNLESS THEY ARE SPECIFICALLY DESIGNATED FOR THIS PURPOSE (CANOPY, TOYS).
- THE PLAYPEN MUST NOT BE USED OUTDOORS, AS ENVIRONMENTAL INFLUENCES CAN NEGATIVELY AFFECT THE STRENGTH OF THE PLAYPEN.
- WHEN TILTING OR RAISING THE PLAYPEN, REMOVE THE BOTTOM FIRST, OTHERWISE IT WILL FALL OUT AND POSE A RISK OF INJURY!
 - THE PLAYPEN MUST NOT BE USED WITHOUT THE BOTTOM.
- IF ANY PART OF THE PLAYPEN IS DAMAGED, BROKEN, WORN OR MISSING, THE PLAYPEN MAY NO LONGER BE USED! SPARE PARTS MAY ONLY BE OBTAINED FROM THE MANUFACTURER!
 - THE PLAYPEN MUST NOT BE MISUSED (CAN ONLY BE USED AS A PLAYPEN FOR BABIES AND TODDLERS)!
 - MATTRESSES MUST NOT BE STACKED ON TOP OF EACH OTHER AND MUST NOT BE MORE THAN 6 CM THICK.
 - THE CHILD MUST NEVER BE LEFT UNATTENDED IN THE PLAYPEN.

INSTRUCTIONS FOR USE

- THIS PLAYPEN IS SUITABLE FOR CHILDREN UP TO A MAXIMUM WEIGHT OF 30 KG.
- FOR CLEANING USE ONLY A CLOTH MOISTENED WITH WARM WATER (NO SOAP OR OTHER CLEANING AGENTS)
- DATA FOR IDENTIFICATION (DATE, ARTICLE DESIGNATION, MANUFACTURER'S DATA) CAN BE FOUND ON THE BOTTOM OF THE BASE.
 - USE ONLY ACCESSORIES TESTED AND OFFERED BY THE MANUFACTURER!
- USABLE FROM 0-24 MONTHS



E-Mail: service@laufgitter-baby.de



WhatsApp: +49 (0) 17643325141



Telephone: + 49 (0) 66561378

Parts list

1 X FOLDABLE PLAYPEN

8 X WOODEN BLOCKS WITH 2 HOLES Ø 8 MM EACH

8 X WOODEN BLOCKS WITH 2 HOLES Ø 6 MM EACH

16 X SCREW M6 X 25 MM

16 X SLEEVE NUT M6

2 X HEXAGONAL WRENCHES FOR FIXING THE HEIGHT
ADJUSTMENT

1 X SMALL HEXAGONAL WRENCH FOR LOCKING THE TOP SIDE

4 X SCREW M4 X 10 MM FOR LOCKING THE TOP SIDE

2 X METAL BOLTS FOR LOCKING THE TOP SIDE

4 X ROLLERS WITH BRAKE

4 X ROLLER RETAINING PIN M8

4 X BOTTOM SUPPORT BAR (EACH 99 CM LONG)

2 X PADDED BASE

1.: Take the playpen and fold it apart.

2.: Take the two M4x10 mm screws and a metal bolt. Place the metal bolt in the middle of the upper wooden bar (inside) of the playpen and screw it tight.

3.: Then fold down the metal bolt and screw it tight by using another M4x10 mm screw. Repeat this procedure on the opposite side.


Please only use the tools supplied. Please do not use a cordless screwdriver. 😊



1.: Now turn the frame upside down and attach the 4 roller holder pins by screwing them clockwise to the playpen.

2.: Then take a roller and press it with the opening onto the roller holder pin until you hear a "click".

3.: To lock the rollers, simply push down on the grooved area of the roller until you hear a "click". Pull up to release the brake.

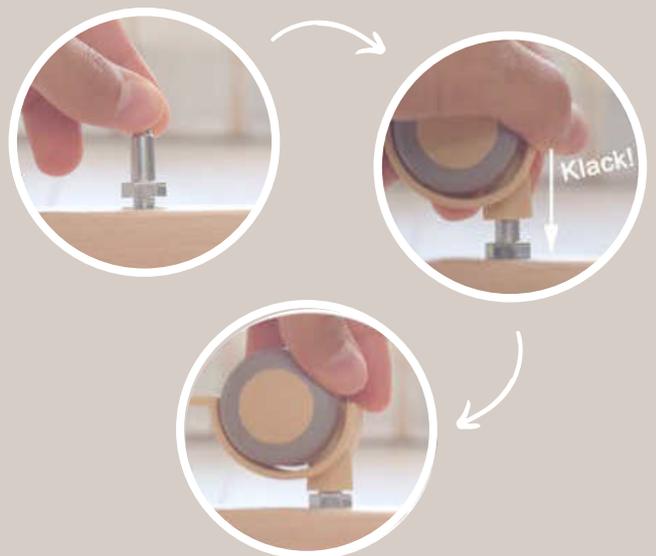

⚠ Please never move the playpen with the brakes locked.

Then attach the stepless height adjustment. For this purpose, use a wooden block with large holes and a wooden block with small holes.

The height adjustment is attached on the two sides parts without rollers. You can adjust the height individually according to your wishes. However, always keep the minimum distance of 30 cm from the lying surface to the top edge of the playpen. Please use a folding rule.

1.: To connect the wooden blocks, insert two M8 sleeve nuts through the large holes. Place this wooden block on the inside of the playpen and connect it to the wooden block with the smaller holes from the outside.

2.: For this purpose, take two screws of type M6x25 mm, put them through the holes and screw them tight.

The height adjustment is assembled on the 2nd and 3rd and on the 7th and 8th round bar from left and right.



Now place the four bottom support bars on the stepless height adjustment.

The bottom support bars are placed on the **2nd** and **8th** round bars from left and right.

Then place the two padded base plates parallel to the bottom support bars.

Tip: Painted playpens may creak or squeak during the first few days. These noises are caused by the foil rubbing against the painted bars. Simply pull a fitted sheet over the bottom panels - this will make these noises disappear immediately.



! Please never use the height adjustment without the bottom support bars!

Finished!

Your playpen is now looking forward to its first use. 😊
If you have any questions about the product, please feel free to contact us by e-mail: service@laufgitter-baby.de, by WhatsApp +49 (0) 17643325141 or by phone: +49 (0) 66561378.

We wish you a good time with your



Sämann foldable Playpen